


owners manual

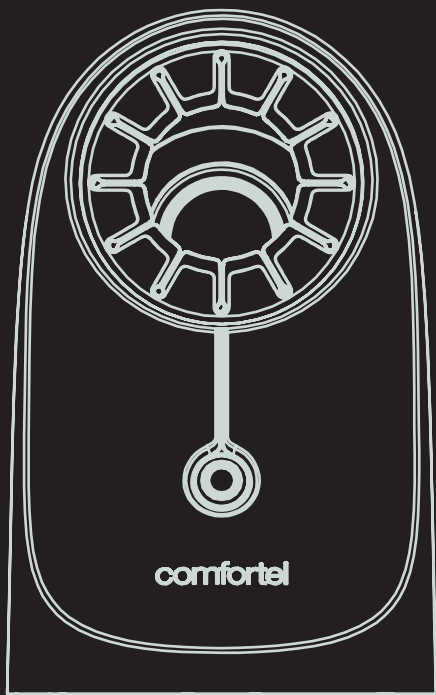

comfortelpresto.com

comfortel[®] presto

IMPORTANT PLEASE READ THESE SAFETY INSTRUCTIONS

GENERAL SAFETY

1. Read carefully & keep these instructions in a safe place.
2. Use this product only for its intended function.
3. Do not use attachments not recommended by the manufacturer.
3. Suitable for dry locations ONLY.
4. Do not use outdoors or on wet surfaces.

ELECTRICAL APPLIANCES

1. Do not allow children to operate this product.
2. Turn power off and remove the plug when not in use or when cleaning.
3. Do not let the power cord get damaged in any way.
4. Do not use an extension cord with this product to prevent overloading the power circuit.
5. Periodically inspect the power cord for signs of damage.
6. Do not use with damaged cable or plug. If the supply cable is damaged, it must be replaced by manufacturer in order to avoid a hazard.



Water poses a serious risk even when device is switched off, do not leave device connected to power supply after use.

PRECAUTIONS

1. Ensure that the Comfortel Presto is on a flat surface when in use. Suction cups should stick securely on a flat surface before turned on.
2. Do not put your hands, any other body parts including face and hair, or any foreign objects not intended for use into the Comfortel Presto when it is turned on.
3. Ensure that you firmly hold the hair brush with your hand when inserting into the Comfortel Presto. Do not let go of the brush while cleaning it over the rotating brush. This will cause the brush to be sucked into the canister.
4. Do not push down hard on the Rotating Brush with the hair brush. This will cause the unit to automatically shut off as a safety precaution.

OPERATING THE COMFOTEL PRESTO



1 Turn ON Comfortel Presto by pressing the power button located on the front of the appliance.



2 Holding the dry hair brush firmly by the handle, insert into the appliance, ensuring the head of the brush where hair is located, is resting directly onto the rotating brush.



Hold the hair brush securely.
DO NOT let go of the hair brush.

DO NOT push down hard on the rotating brush with the hair brush as this will cause the unit to automatically shut off as a safety precaution.



3 Gently move and turn the hair brush, so the rotating brush makes contact, and removes the hair from your hair brush.



4 Pull out the hair brush from the appliance. Repeat steps 2 & 3 if brush needs further cleaning.



DO NOT push the hair brush all the way through the unit.

Turn OFF Comfortel Presto by pressing the power button when not in use.

CLEANING YOUR COMFOTEL PRESTO

EMPTYING THE CANISTER

Ensure that your appliance is turned off by the power switch before cleaning.



Located at the back of the appliance, push down on the tab and slide the canister away from the main unit and rotating brush.

Slide the canister away from the appliance. Empty contents.



Use a lint free cloth or soft brush to remove any dust or debris from both the canister and around the rotating brush.

Slide canister back onto the unit and click into place. **The appliance will not start unless the canister is correctly in place.**



The canister **ONLY** can be cleaned with warm soapy water. Must be completely dry before use.

CLEANING YOUR COMFOTEL PRESTO

CLEANING THE ROTATING BRUSH:

Ensure that you unplug your appliance from the mains electricity supply before cleaning.



1. Push the red button on the rotating brush to release it from the unit. Remove by pulling the rotating brush away from the unit.

2. Remove hair from rotating brush. Stubborn hair can be removed by cutting with scissors. **DO NOT CUT the rotating brush's bristles.** Dispose of hair and debris.

3. Use a soft brush to remove any dust or debris and slide the rotating brush back onto the main unit and click into place.

Rotating brushes should be replaced from time to time and are available as an accessory to purchase.

CLEANING THE MAIN UNIT

Use a lint free cloth or soft brush to remove any dust or debris from the main unit and around the rotating brush.

Do not use:

- acetone
- furniture polishes
- bleach
- abrasive cleaners
- steel wool



DO NOT use water to clean the main unit or rotating brush. **NEVER** submerge the main unit into water.

FAILURE TO OPERATE

In the unlikely event that your Comfortel product does not operate correctly, check that the Comfortel product and mains power supply are switched on, and that power is available.

The Comfortel Presto has a fail-safe mode that will automatically turn off the unit as a precaution. In most instances, the following troubleshooting will cover failure to operate.

TROUBLE SHOOTING

Rotating Brush Automatically Stops.

Pushing down too hard on the rotating brush will cause the brush to automatically stop as a safety precaution. Please remove brush and wait for the rotating brush to start again.

Comfortel Presto will not start after installing the cannister.

If the canister is not fully installed correctly, the Comfortel presto will not start. Make sure the cannister slides all the way into the main unit, and clicks into place.

If in doubt or for further advice, please contact your local distributor where you purchased this Comfortel product or view our troubleshooting videos at www.comfortelpresto.com.

RECYCLING AND DISPOSAL

Your Comfortel electrical product is classified as 'electrical or electronic equipment' and must not be disposed of with other household or commercial waste at the end of its working life. When you have no further use for your Comfortel product, please dispose of it according to your local authority's recycling procedure. For more information contact your local authority.

LOOKING AFTER YOUR COMFOTEL PRESTO

- Do not carry out any maintenance or repair work other than shown in this Operating Manual or advised by your local distributor and/or manufacturer.
- Always disconnect the plug from the mains before inspecting for problems. If the appliance will not operate, first check the mains socket has electricity supply and that the plug is properly inserted into the socket.
- A periodic inspection of all components and fasteners should be made to ensure that your Comfortel product is structurally intact and functioning properly.

MANUFACTURERS WARRANTY

All Comfortel electrical products are individually tested before leaving the factory. However in the unlikely event of the product proving defective due to faulty workmanship or materials, then, at its sole discretion, Comfortel will repair or replace the product at no charge with an identical or equivalent product within one year from the original date of purchase. A replacement product assumes the remaining warranty of the original product purchased.

To claim under this warranty, please contact your local distributor, where you purchased this Comfortel Product. Please ensure that you include a proof of purchase with any returned product.

This Warranty only applies to genuine Comfortel products purchased through a Comfortel approved stockists and does not cover products repaired or serviced by anyone other than Comfortel personnel or Comfortel representatives.

Warranty Claims does not include:

1. Damage caused by misuse, improper treatment or violent usage.
2. Damage caused by failure to comply with these instructions..
3. Damage caused by connecting this appliance to the incorrect voltage.
4. Damage caused by connecting accessories supplied by other manufacturers.
5. Minor faults which do not significantly affect the value of the device or its effective use.
6. Normal wear and tear.

Note that this Warranty may be invalidated where serial numbers or identification have been erased, damaged or modified. This does not affect your statutory rights.

For customers in Australia, New Zealand and Singapore, please phone your nearest Comfortel Showroom. For locations, please visit our website.

comfortel

#1545 COMFORTEL PRESTO

PATENT PENDING

The information contained in this document is subject to change without notice and should not be construed as a commitment by Comfortel Furniture.

Comfortel Furniture assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Comfortel Furniture shall not be liable for incidental or consequential damages in connection with or arising out of the use of this document and the program material.

©Comfortel Furniture. All rights are reserved.

No part of this document may be photocopied, reproduced or translated to another language without written consent of Comfortel Furniture.

comfortelpresto.com